



VZ-1Shooter



Thank you for purchasing the **VZ-1Shooter** shoulder brace for DV camcorders. Here are some tips on how to use your new **1Shooter**.

Adjustment: If necessary, reposition the camera platform along the main arm of the **1Shooter** using the included thumbscrews, nuts and lock washers. You can move the camera platform up or down and front to back for better positioning of the camera.

** Although this step is not necessary, the **1Shooter** is designed so that the curved shoulder rest can be bent to fit the individual's shoulder. Don't be afraid to bend this part, as it is made from a flexible grade of aluminum. Broad adjustments can be made by hand. For finer adjustments you may need to use a bench vise.*

Attaching a Lens Controller: All of our controllers can be mounted to the **1Shooter**:

For VZ-PG-L or VZ-Pro-L

-You can clamp your controller onto the existing handle or you can mount directly to the **1Shooter**. To mount the controller directly, first remove the handle from the **1Shooter**. Sandwich the end of the main arm between the controller and its clamp, aligning the clamp holes with the last two adjustment holes on the **1Shooter**. Then insert the screws into the clamp and through the holes of the **1Shooter**. Thread the screws into the controller until tight.

For all other controllers

-Simply clamp the controller onto the handle of the **1Shooter**.

Mounting your Camera: Place your camera on top of the camera platform. Thread the mounting screw into your camera's built-in tripod mount until secure. You can adjust the lateral position of the camera by loosening the screw and sliding the camera from side to side.

